

 
**Instructions Forsec ID EAS**  
The active ID EAS alarm systems  
with unique company coded alarm units



**Forsec K14-Ltag (Alarm tag)**

**How to attach the K14-Ltag on a product**

Connect the loose the right side wire into the keyhole on the alarm unit, to lock the wire firmly twist it counter clockwise, then after about 15 seconds the alarm unit automatically activates

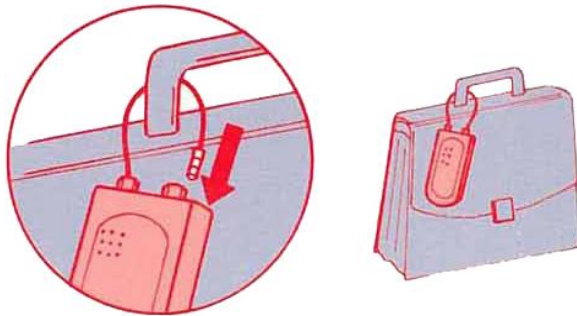

**How to remove the K14-Ltag**

 
Hold the alarmed item above the "Matresetter" that can be activated by a foot pedal. Now the alarm tag flashes twice in quick succession. Then you have 15 seconds to To remove the alarm loop by twist the right part of the wire clockwise until the heel is above the key slot on the alarm unit, then just pull it up from the alarm unit. If the tag does not flash, the battery may have run out. Check the alarm unit by passing the entrance with a closed loop on the alarm device. If it does not beep, it should be replaced with a new one. Do the same procedure at disarming using the "Handresettern" while pressing button the handresetter



**How to store the K14-Ltag**

The alarm units taken from the goods or not used at the moment, should not be stored closer than 1 meter from the Matresetter and no closer than 5 m radius of the alarm gate or the alarmed entrance

**NOTE! If you store the alarm units with closed loop, the alarm consumes battery and the battery life is considerably reduced. The alarm devices should always be on the goods or the alarm loop should be unplugged and stored in one box**

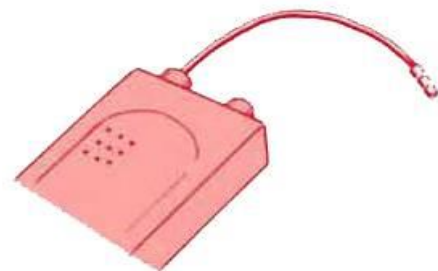


### **.Matresetern**

The Matresetter can disarm the K14-Ltag alarm unit in about 15 - 20 cm. The alarm unit is disarmed in this area. The alarm unit will now flash twice in quick successions and then you have 15 seconds to Press down the black bar on the back side of the alarm unit, with your nail and gently pull away one side of the loop and it will be released.


**Important in case the alarm unit will flash once again and beep, the alarm device is activated.**

 Never leave the alarm units near the matresetter (not closer than 1m from the matresetter) then it means that the battery is used up more quickly, and that the device would constantly sound to remind you that there is an alarm device within range.

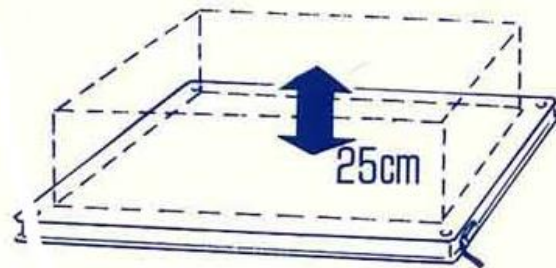

### **Handresetter**

 The handresetter can be used within 2-3 cm from the alarm unit to be disarmed. It disarms the alarm unit by keeping it within 2-3 cm from handresetter and pressing the button on the handresetter, the alarm unit will now flash twice in quick successions and then you have 15 seconds to open the alarm unit. It can also be used to stop the alarm that is triggered by mistake.

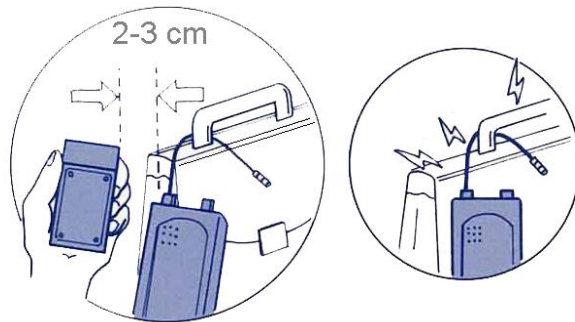

### **The alarm gates or overhead / underground antennas**

If you are planning to modify the layout in the store, then please contact us. We will help you to find the optimal location for the antenna in the new layout